



Installation and Maintenance Instructions

WALL BASE

VPI 2013

NOTICE TO INSTALLER

This brochure contains important installation, maintenance and warranty information as well as cautions and warnings. Our warranty will become effective only if these instructions are followed in every respect. FOR A COMPLETE STATEMENT OF VPI'S WARRANTY, contact: VPI, Manager, Customer Service, P.O. Box 451, Sheboygan, WI 53082-0451. PLEASE MAKE CERTAIN THESE INSTRUCTIONS ARE PLACED IN THE HANDS OF THE FLOOR OWNER.

Read the complete instructions before beginning the installation.

GENERAL

The wall surface must be thoroughly dry, smooth, and free from dirt, wallpaper, vinyl wall covering, grease, old adhesives, and other extraneous material. DO NOT apply directly over outside walls in contact with earth (such as unfired basement walls) or over ceramic tile, metals, or other impervious surfaces because poor adhesion may result.

Maintain the wall base, adhesive, and room air at a uniform temperature of at least 70° F. for 24 hours prior to, during, and 48 hours after the installation. Rolled wall base should be unrolled and allowed to lie flat for 24 hours prior to the installation to regain its normal shape.

Use only VPI #600 wall base adhesive carefully following the directions on the container label. THE USE OF ANY OTHER ADHESIVE WILL VOID VPI'S WARRANTY.

INSTALLATION OF BASE

Spread the adhesive either on the back of base or on the wall using a triangular notched trowel or cartridge gun. Trowel notches should be 3/32" deep by 3/32" wide with 3/32" flats. If applying adhesive with a cartridge gun, use a 2-hole nozzle for 2-1/2" base, a 3-hole nozzle for a 4" base, and a 5-hole nozzle for 6" base. Apply the adhesive at least 1/4" from top of base if using a trowel and 1" from top of base if using a cartridge so that adhesive does not seep out as the wall base is rolled.

Bond the wall base within 20 minutes of the adhesive application. Roll thoroughly with a hand roller immediately after adhearing the wall base to the wall. (figure 1). If the roller is unavailable, wipe the wall base with soft cloth, firmly pressing the base against the wall. Base applied to curved or irregular surfaces may require bracing until the adhesive sets.



figure 1.

If the wall or floor surface is uneven, it may be necessary to trim the edges before installing adjoining pieces of base. Use a razor type utility knife, cutting the wall base from face to back.

Immediately remove excess adhesive from the base or the wall with water. Excess adhesive may leave a stain if not removed promptly.

Avoid excessive heat to the wall base from direct sunlight, until the adhesive has completely set.

- 4 To ensure that the toe sits flush against the floor, the initial cut (Cut #1 - fig. A) can be widened on either side of the line (Cut #2 - fig. A) near the bottom of the base. This cut is optional. Make the cut (gouge) downward, widening the initial cut to approximately one half inch at the bottom. This will allow the corner to be easily formed.

CORNERS

Pre-formed outside corners are available - 2", 4" and 6" if desired. However, both outside and inside corners can be formed easily from standard 4-foot lengths or rolls.

Outside Corners

(Suggested Method)


- 1 When you come to an outside corner, butt the next section of base to the last installed section (or continue to the corner when using coils). Make sure the base is in the proper position on the wall as you would install it.
- 2 Using a pen or pencil, mark the back of the base using the wall as a guide. This will give you the correct contour of the wall.



figure 2

- 3 Fold the wall base at the line, face in, and shave the back of the wall base while folded (figure 2), removing the line and approximately 1/8" width of wall base material on either side of the score line. If you are using a top set gouge to make these cuts, turn the base face down and make your cut starting at the top and working down to the bottom (Cut #1). Note: Always gouge on the side of the score line in the direction the base will be going.

Important: The depth of this area at its deepest point should not exceed 20% of the base thickness.

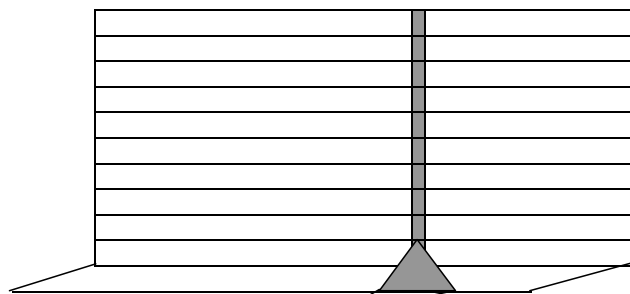

Cut #2 Option

- 4 Use a hot air blower to heat the back of the base along the score line. Apply heat carefully because excessive heat will blister or deform the base.

Note: The next two steps must be completed before continuing to Step 5.

Use a hot air blower to heat the shaved area. Apply heat carefully because excessive heat will blister or deform the base with hand roller (figure #3).

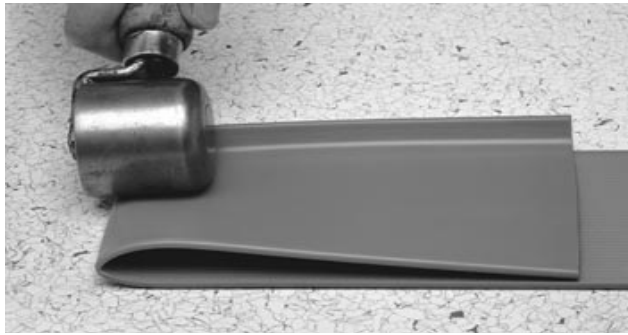


Figure 3

5 Pull up on the toe and turn it inside out. Position the base after applying adhesive and set into place allowing the toe to drop down to form a perfect corner.

6 Roll thoroughly or firmly press corner against wall.

Note: You should cool the heated area by placing a wet cloth against the corner.

Wipe dry.

7 Remove excess adhesive.

Inside Corners
(Suggested Method)

1 Draw a line on back of base where corner will occur

2 Using a straight edge as a guide, lightly cut along line from top to bottom of base to a depth of approximately 20% of the base thickness.

3 Cut a small 90° triangular wedge to remove toe of cove base at line (figure 4).

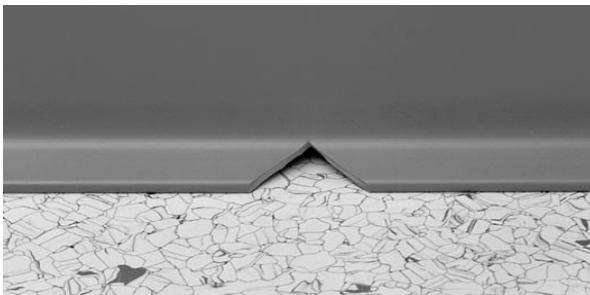


Figure 4

Initial Maintenance

VPI Wall Base Accessories:

Wipe off any excess amounts of adhesive that may have come through the seams with a damp cloth.

Allow the adhesive on the wall base to thoroughly dry before completing initial maintenance.

Initial maintenance and normal maintenance procedures are as follows:

1. Wall Base and Accessories are maintained by hand.
2. Wash with a wet cloth or wet mop using PRT Neutral cleaner per directions.
3. Rinse with clear water.
4. Clean wall base and accessories as conditions and soiling dictates.

5 Fold base at the mark with the face in. While the base is still warm, apply adhesive and press the base into the corner. Carefully pushing the toe of the cove base against the wall to close the triangle.



Figure 5

6 Promptly roll the wall base.

7 Cool the wall base by holding a wet cloth against the corner.

Wiping the wall base dry.

8 Remove the excess adhesive with a clean moist cloth.

(Optional Method)

1 When you come to an inside corner, use a scribe to mark the wall base using the corner as the pattern to get the exact curvature of the wall.

2 Cut the base to the exact length allowing a good, tight fit to the wall.


3 Apply the proper amount of adhesive to the wall base and securing the piece of wall base to the wall.

4 Using the same procedure as above, scribe and cut the second piece for the corner. (DO NOT install the second piece yet.)

5 After cutting the second piece of base, turn the piece front side down and make a back angle cut in the toe, starting at the top of the toe and cutting just short of the top return.

Piece #1

Piece #2

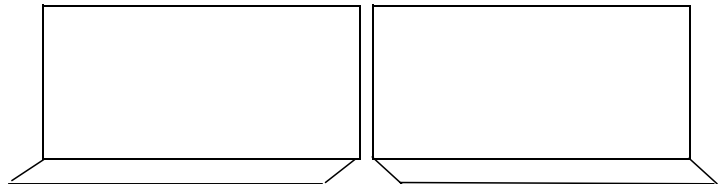

6 Check the fit with the previously installed piece.

7 Make any additional cuts to ensure a snug fit.

8 Apply the adhesive, install, roll then wipe with a moist cloth.

Routine Maintenance
VPI Wall Base and Accessories

1. Wall Base and Accessories are maintained by hand.
2. Wash with a wet cloth or wet mop using PRT Neutral Cleaner per directions.
3. Rinse with clear water.
4. Clean wall base and accessories as conditions and soiling dictates.

Yearly Maintenance
VPI Wall Base and Accessories

1. Wall Base and Accessories are maintained by hand.
2. Wash with a wet cloth or wet mop using PRT Neutral Cleaner per directions.
3. Rinse with clear water.
4. Clean wall base and accessories as conditions and soiling dictates.

For resolution of maintenance problems not covered in these instructions, contact



3123 S. 9th Street, P O Box 451, Sheboygan, Wisconsin 53082-0451 U.S.A.
Phone: 920-458-4664 / 800-874-4240 Fax: 920-458-1368

Install & Maint. Wall Base 13: 03-26-13